English

What's in the box

Carefully open the packing box and ensure that you have the following items.

1. Digital Picture Frame x 1
2. AC power adapter x 1

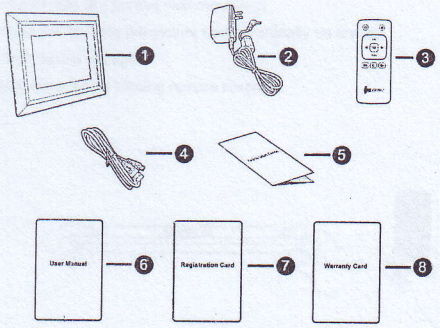

3. Magnetic remote control (with CR2025 lithium battery) x 1
4. USB cable x 1
5. Quick Start Guide x 1
6. User Manual x 1
7. Registration Card x 1
8. Warranty Card x 1

- Actual product appearance may vary from the illustrations shown in this User Manual.
- Available accessories may vary depending on the area where you purchased the picture frame.

Overview

Right view

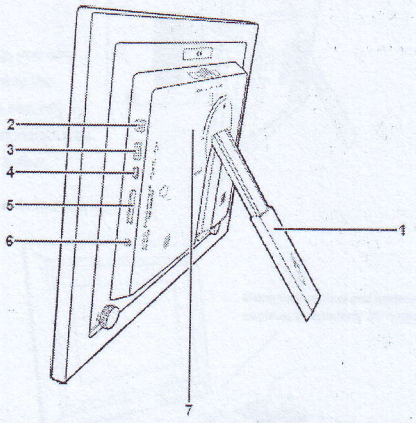

No.	Description
1	**Adjustable back stand** See "Step 1: Using the adjustable back stand" on page 12 for details.
2	**Power button** Press the Power button to turn on/off the picture frame. See "Step 2: Connecting to power" on page 14 for details.

English

No.	Description
3	USB port Allows for a USB flash drive. ? Play back photos, music or videos stored in the inserted drive. ? Copy photos or music from the inserted drive to the picture frame. See "Step 6: Copying photos and/or music to the internal memory" on page 19 for details.

4 Mini USB port

Allows you to connect the picture frame to a computer to manage the files in the internal memory of the picture frame. See "Step 7: Connecting the picture frame to a computer" on page 20 for details.

5 Memory card slot

Allows for an SD™/SDHC™, MultiMediaCard™ (MMC), Memory Stick™ (MS), Memory Stick PRO™ (MS PRO), Memory Stick Duo™ (MS Duo) and xD-Picture Card™ (xD) memory card.

? Play back photos, music or videos stored in the inserted card.

? Copy photos or music from the inserted card to the picture frame. See "Step 6: Copying photos and/or music to the internal memory" on page 19 for details.

6 Power jack

Connect one end of the AC power adapter into the power jack and the other end into a power outlet.

7 Remote control storage

Magnetic area for placing remote control.

Rear view

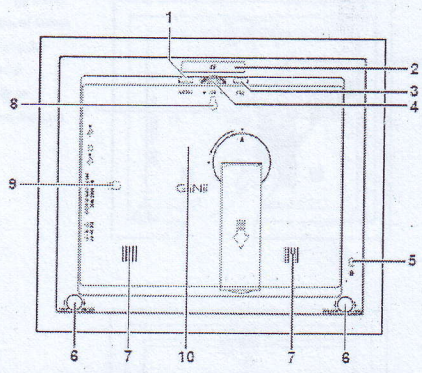

No.	Description
1	**MENU button** See "Using the control buttons" on page 7 for details.
2	**G-button** See "Using the control buttons" on page 7 for details.
3	**ESC button (ESCAPE button)** See "Using the control buttons" on page 7 for details.
4	**Scroll wheel/OK button** See "Using the control buttons" on page 7 for details.
5	**Kensington® security slot** You can attach an anti-theft Kensington® lock and cable to this slot to help prevent possible theft.

English

No. | Description

6 EZ Lock System

You can use the EZ Lock Screws to lock or unlock the wooden frame.

7 Speakers

Plays back the sound.

8 Wall mount hole (for landscape wall mounting)

Allows you to hang the picture frame horizontally on a wall.

9 Wall mount hole (for portrait wall mounting)

Allows you to hang the picture frame vertically on a wall.

10 Remote control storage

Magnetic area for placing remote control.

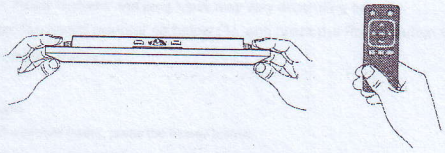

☞ In this User Manual, instructions or examples provided are based

Operating the picture frame

You can use the control buttons on the back or the supplied remote control to operate the picture frame.

upon operation with the remote control. To know how to use the control buttons, refer to "Using the control buttons" on page 7 for details.

Using the remote control

The supplied remote control is magnetic. With its magnetic backing, you can stow away the remote securely in the designated area shown below.

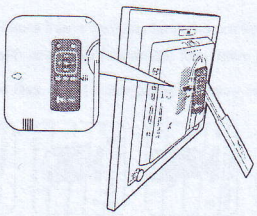

The picture frame has a built-in remote control sensor behind the paper matting.

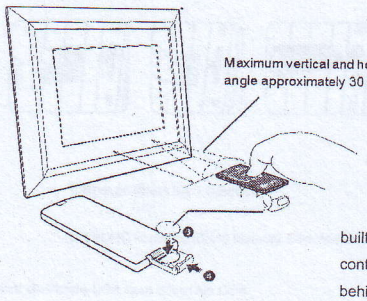

Approximately 1.4 m (4.6 ft.) or less

rds

Getting started

Step 1: Using the adjustable back stand

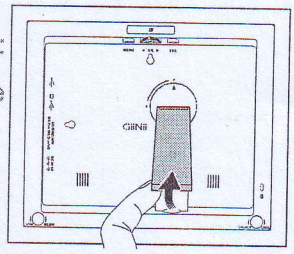

1. Gently pop out the back stand as shown below.
2. To place the picture frame horizontally or vertically, you can rotate the back stand by aligning the triangle mark with the rounded points (1 or 2).
3. Pull out the back stand and adjust accordingly to the preferred viewing angle.

? It is recommended to place the picture frame horizontally, because this direction provides the best viewing and operating experience.

? By using the wall mount holes, you can hang the picture frame horizontally or vertically on the wall.

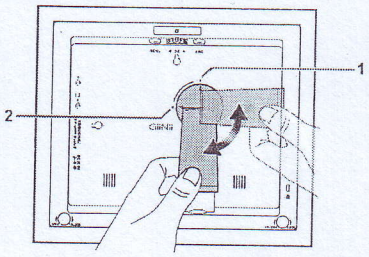

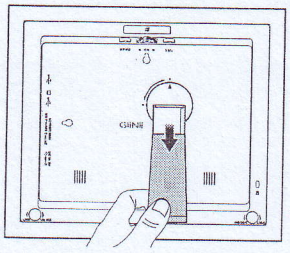

☞

Step 2: Connecting to power

1. Place the picture frame on a flat surface.

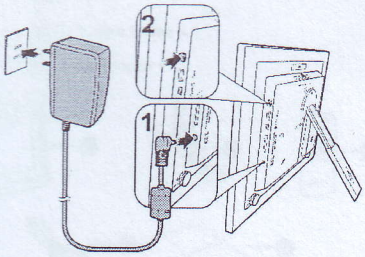

☞ • Power systems and plug types may vary depending on your country/region.

2. Connect the power adapter as below (1), and press the Power button to turn on the picture frame (2).

• To turn off the picture frame, press the Power button.

Step 5: Inserting a memory card/ USB flash drive

You can turn on the picture frame and play back the pre-installed photos in the internal memory with no memory card/USB flash drive inserted.

To play back your own files, insert a compatible memory card or USB flash drive that contains supported files into the corresponding slot on the picture frame as illustrated below.



☞ SD/SDHC MultiMediaCard Memory Stick Memory Stick PRO Memory Stick xD-Picture USB flash drive Duo Card

For more information about the supported file formats, refer to "Specifications" on page 59.